

FIG. 1

FIG. 2

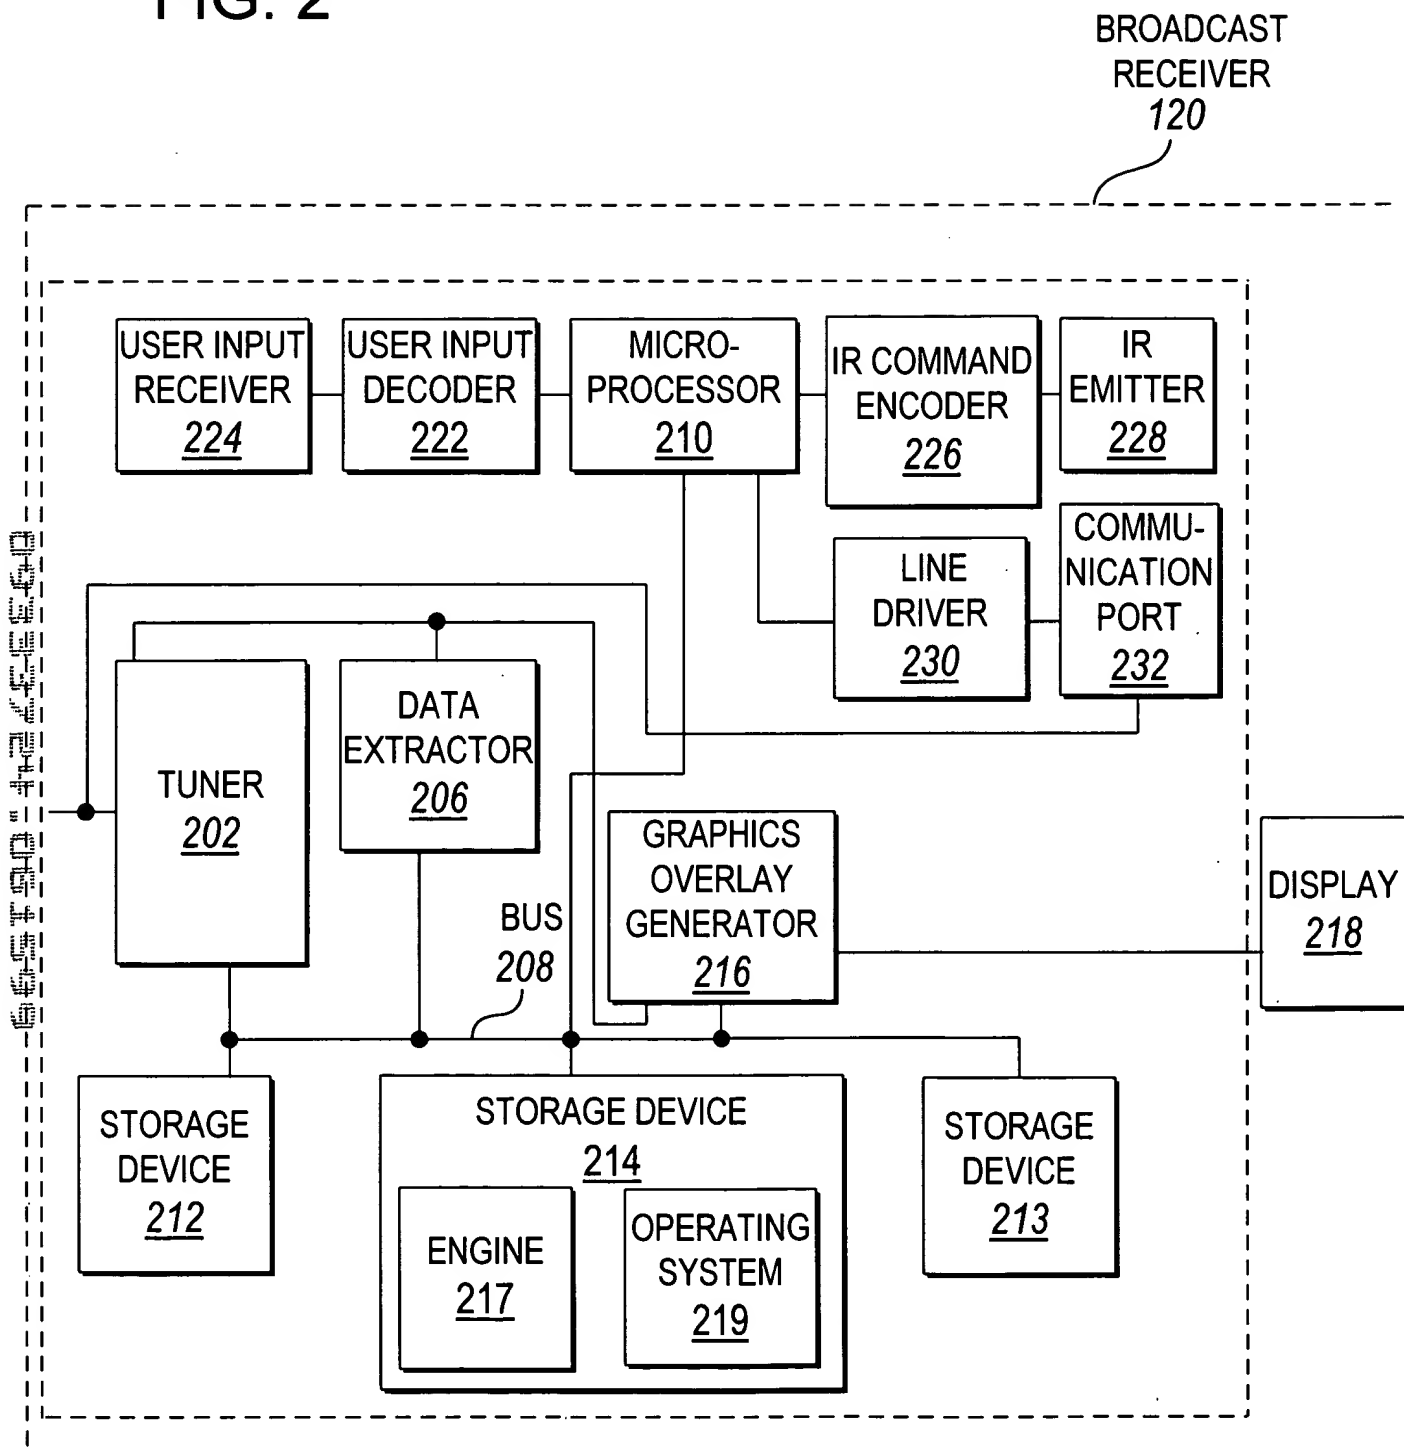
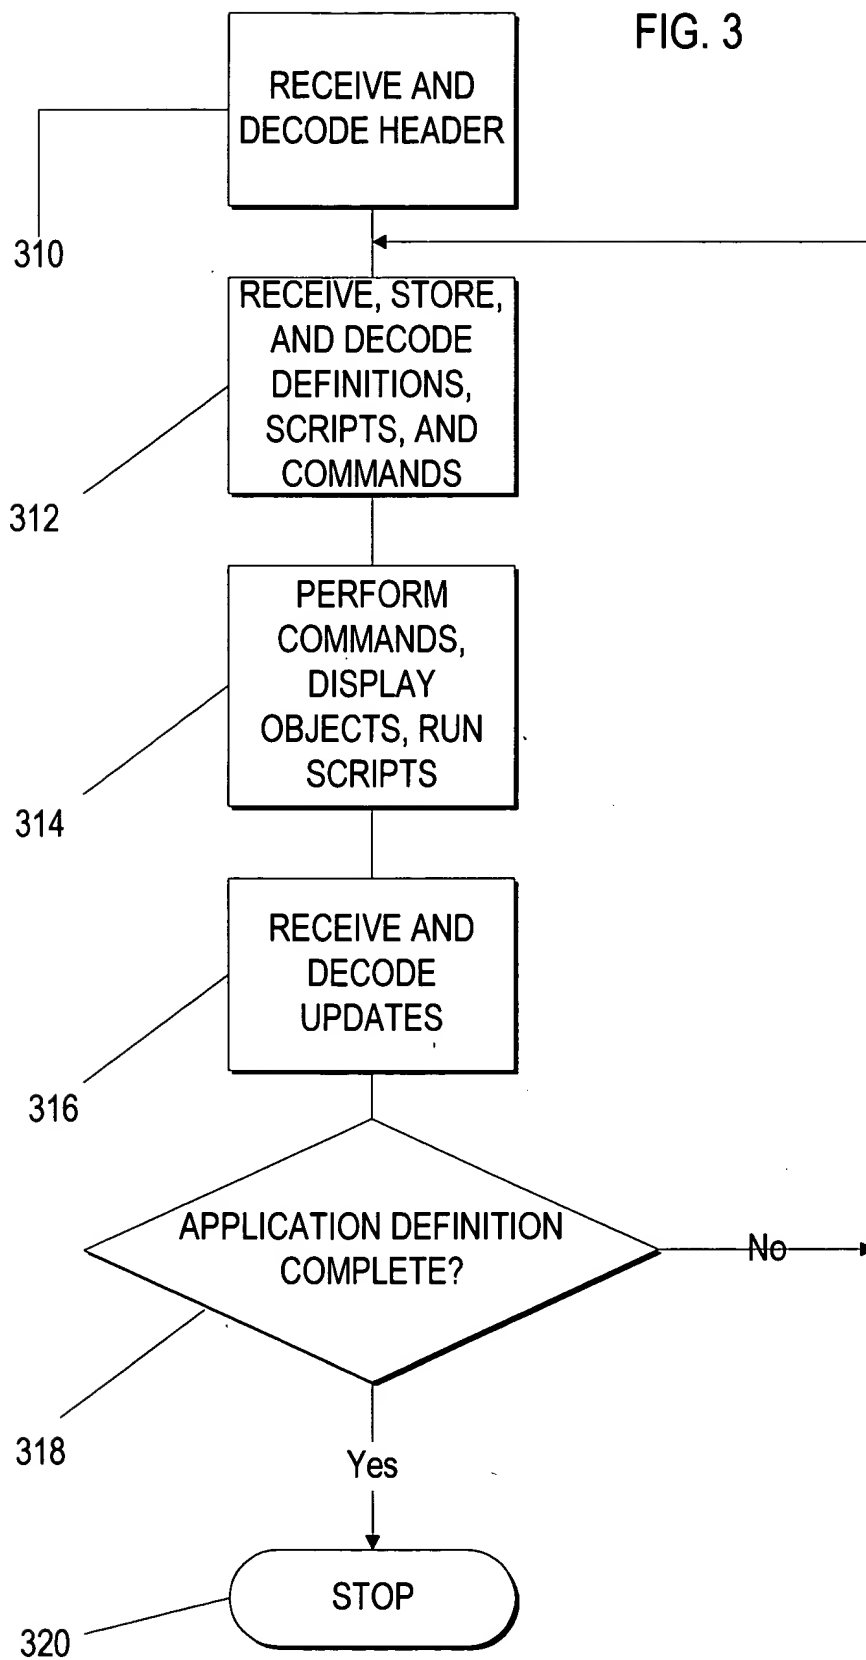


FIG. 3



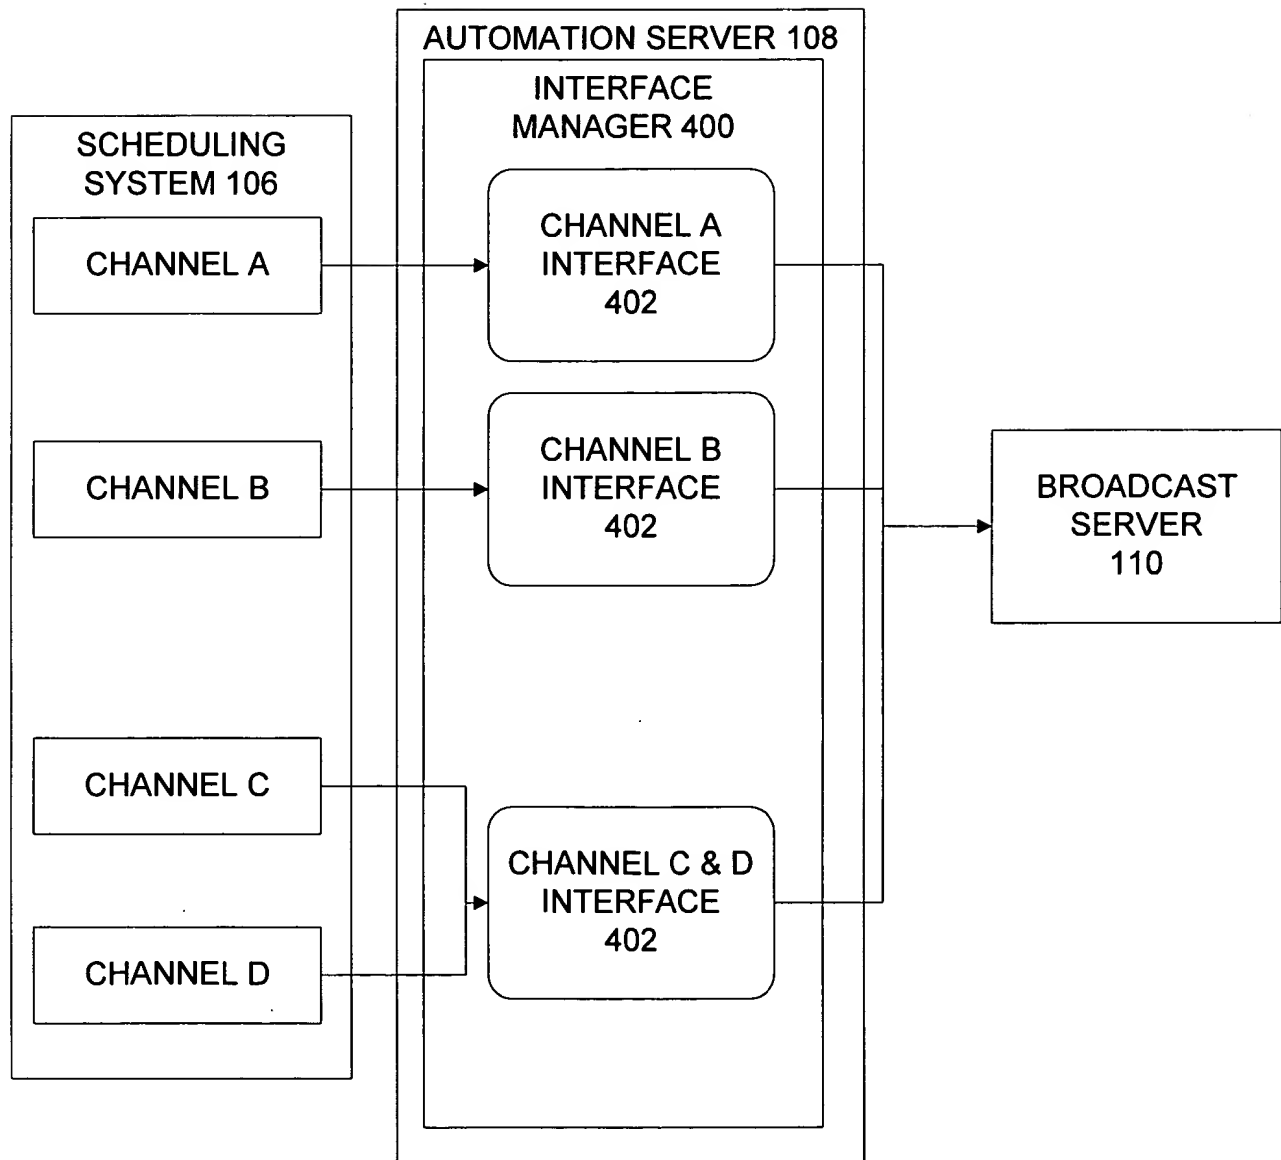


FIG. 4

CHANNEL INTERFACE 402

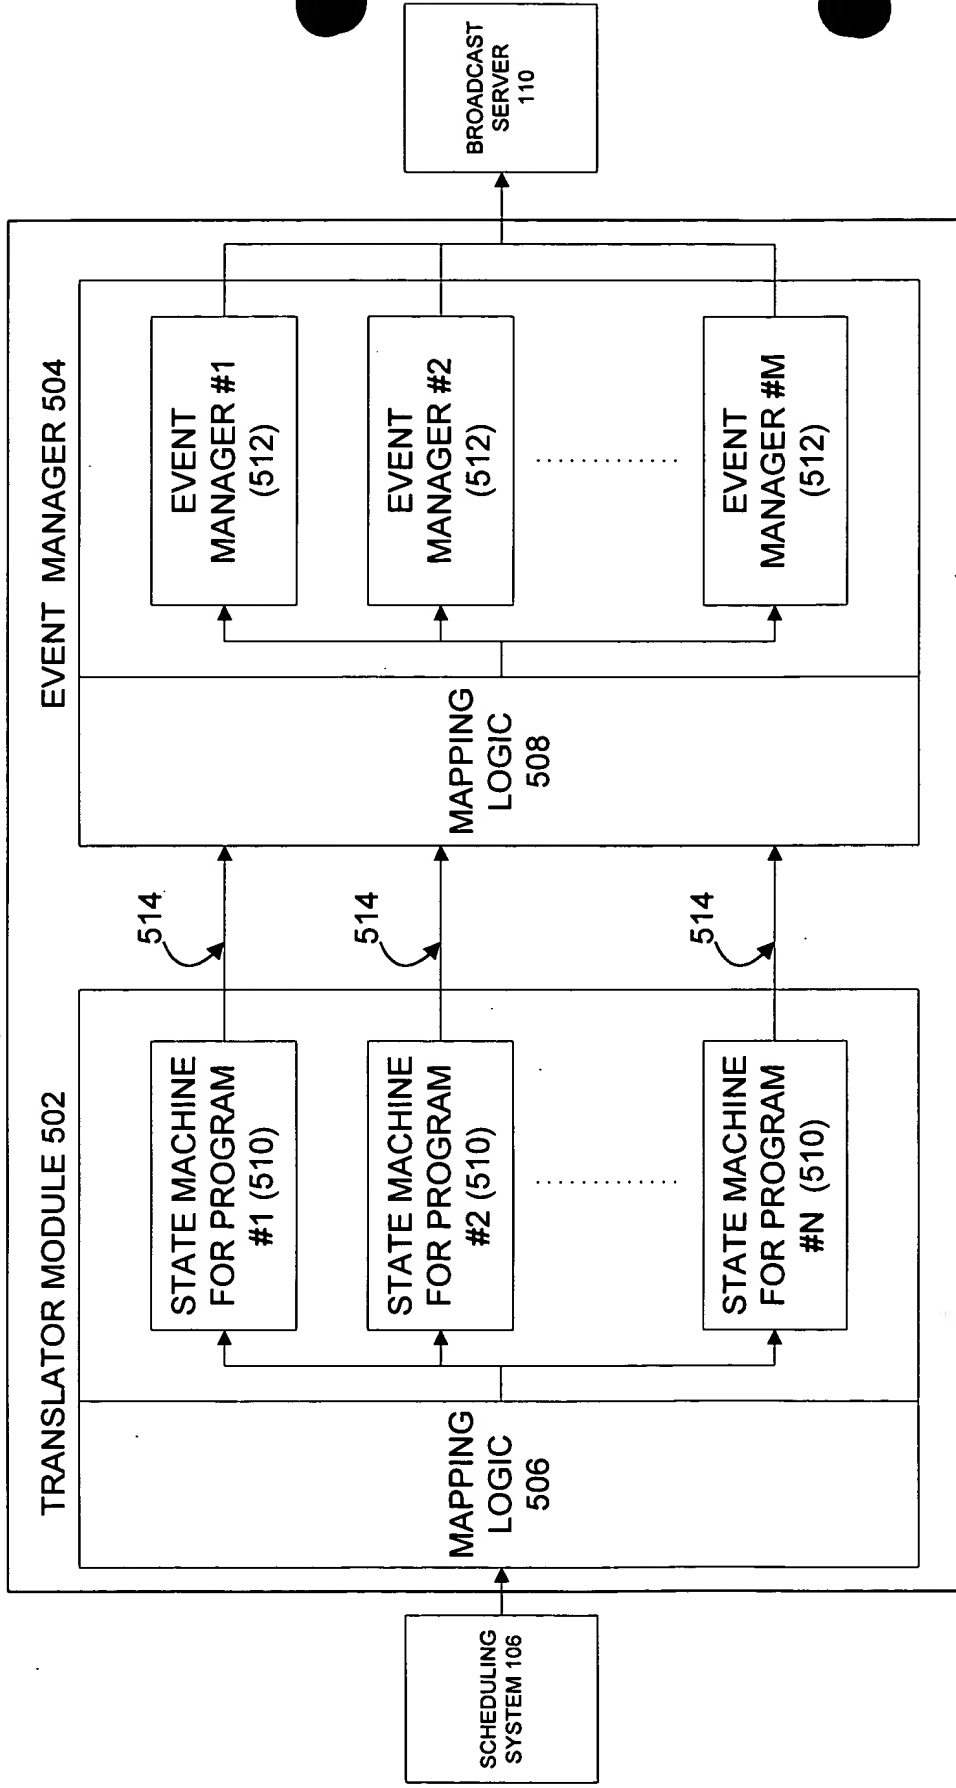


FIG. 5

Interface Manager Life Cycle Interaction Diagram

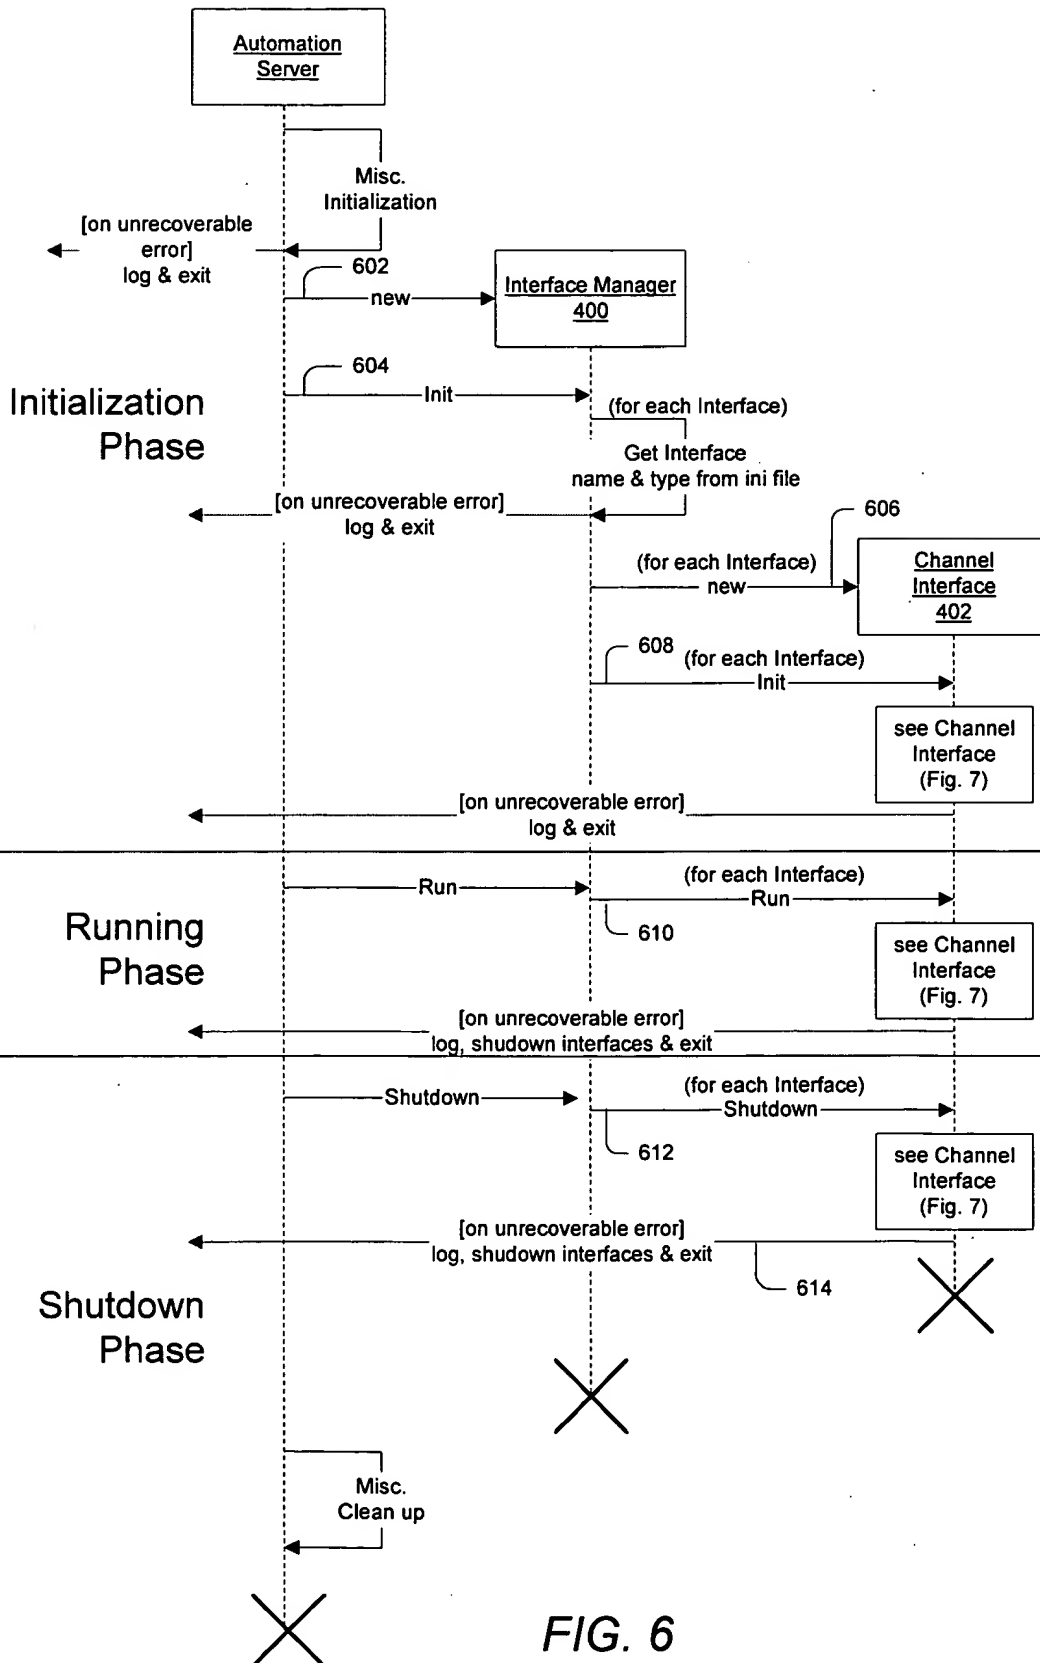


FIG. 6

Interface Life Cycle Interaction Diagram


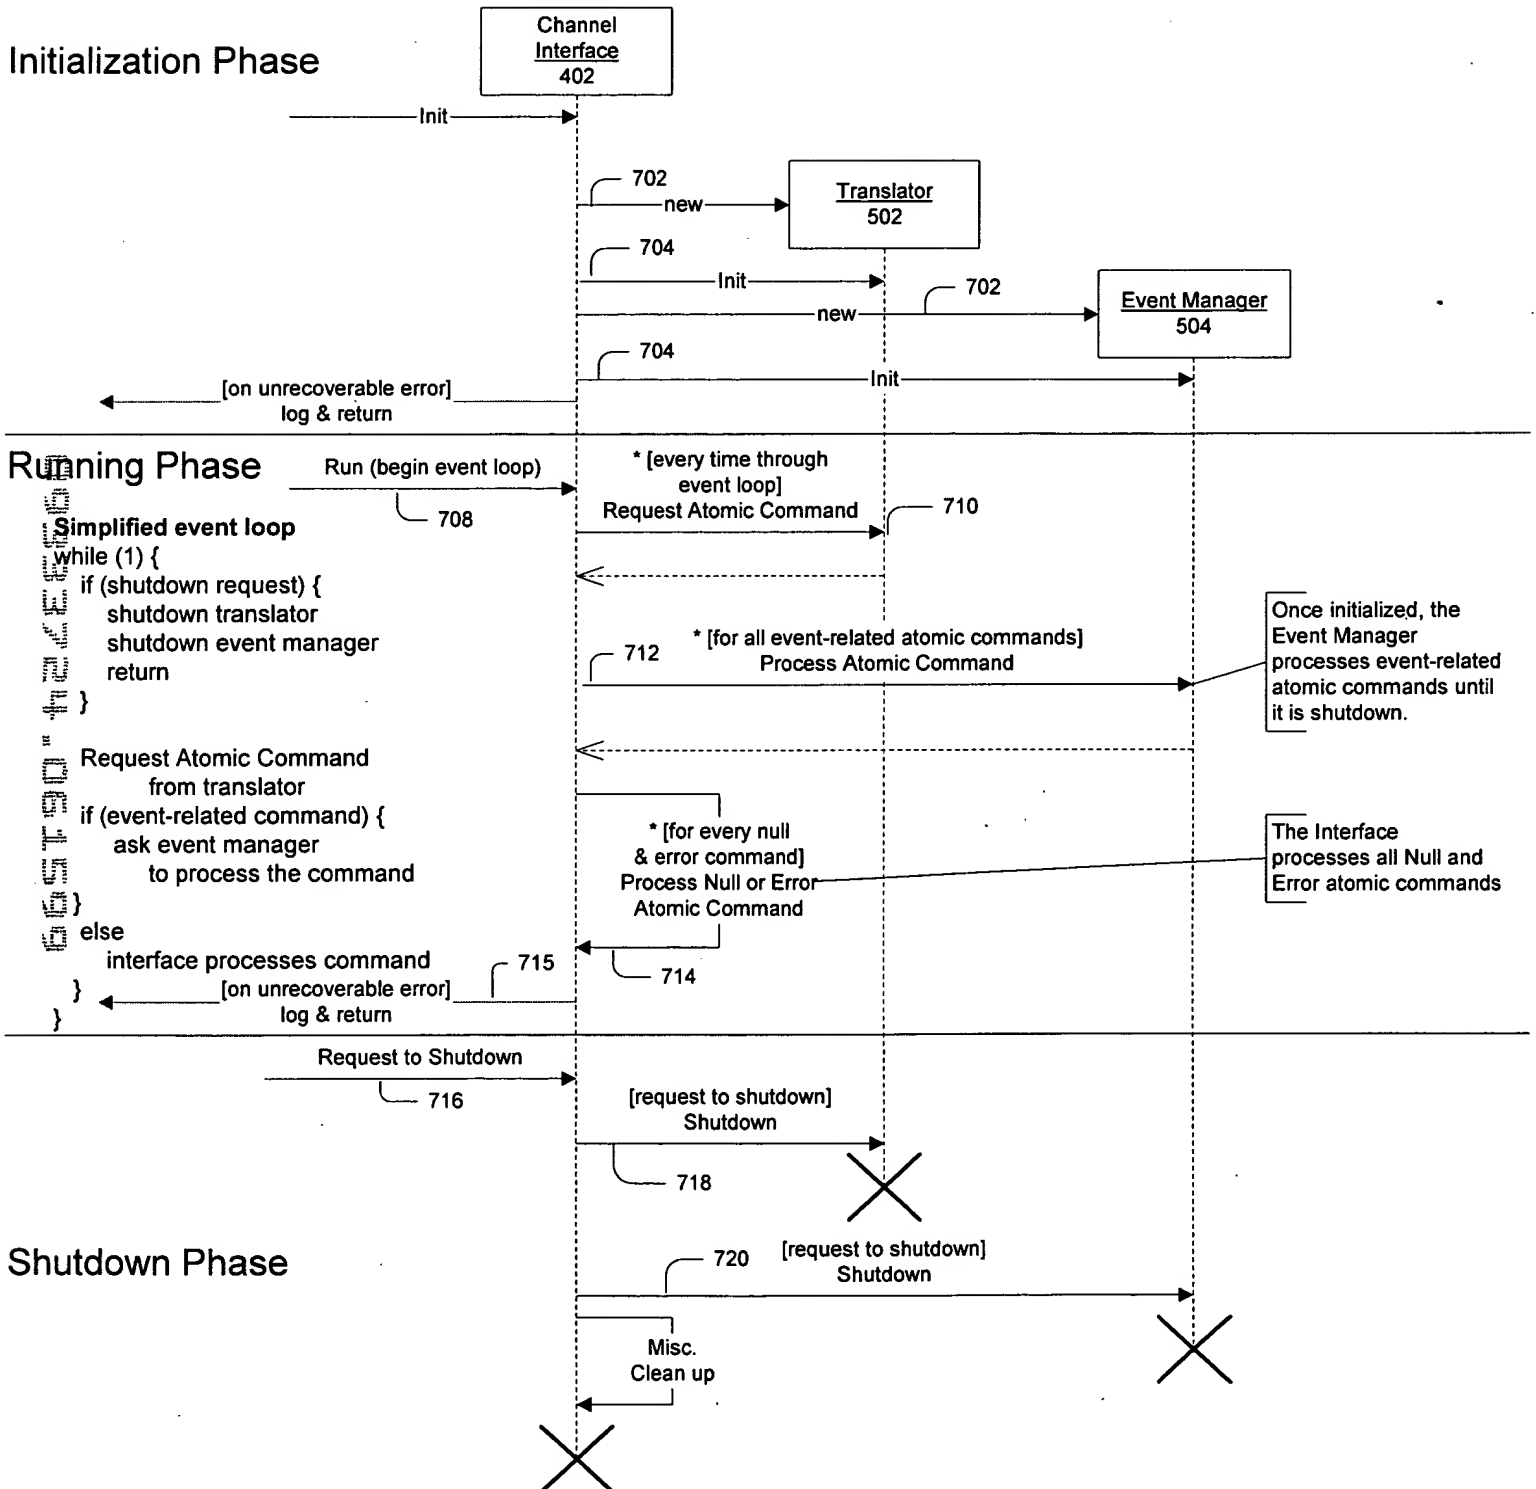


FIG. 7

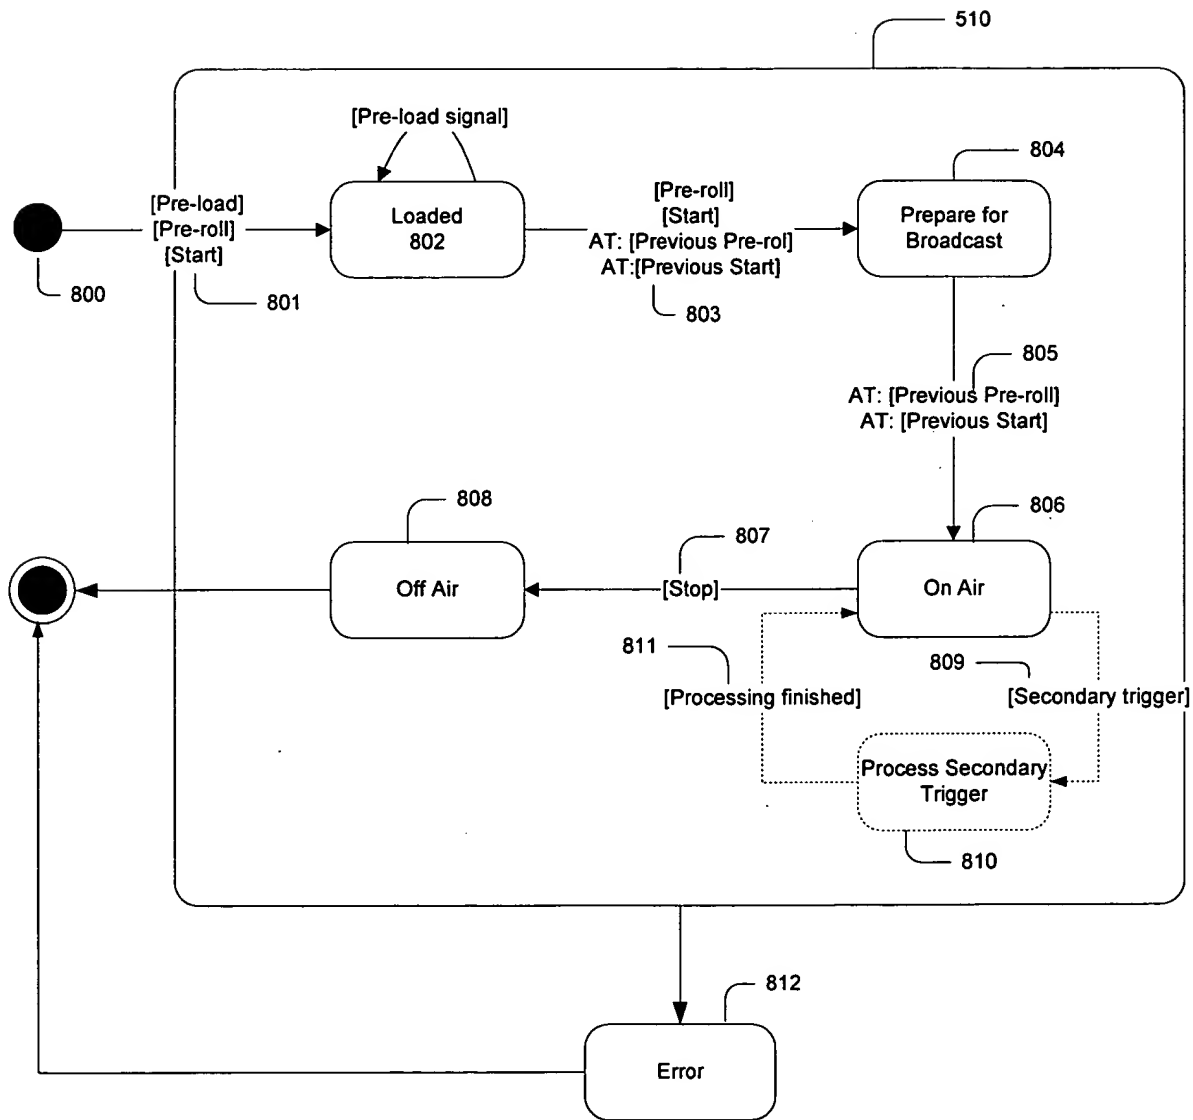

AT: Automatic Transition on Previous Signal

FIG. 8

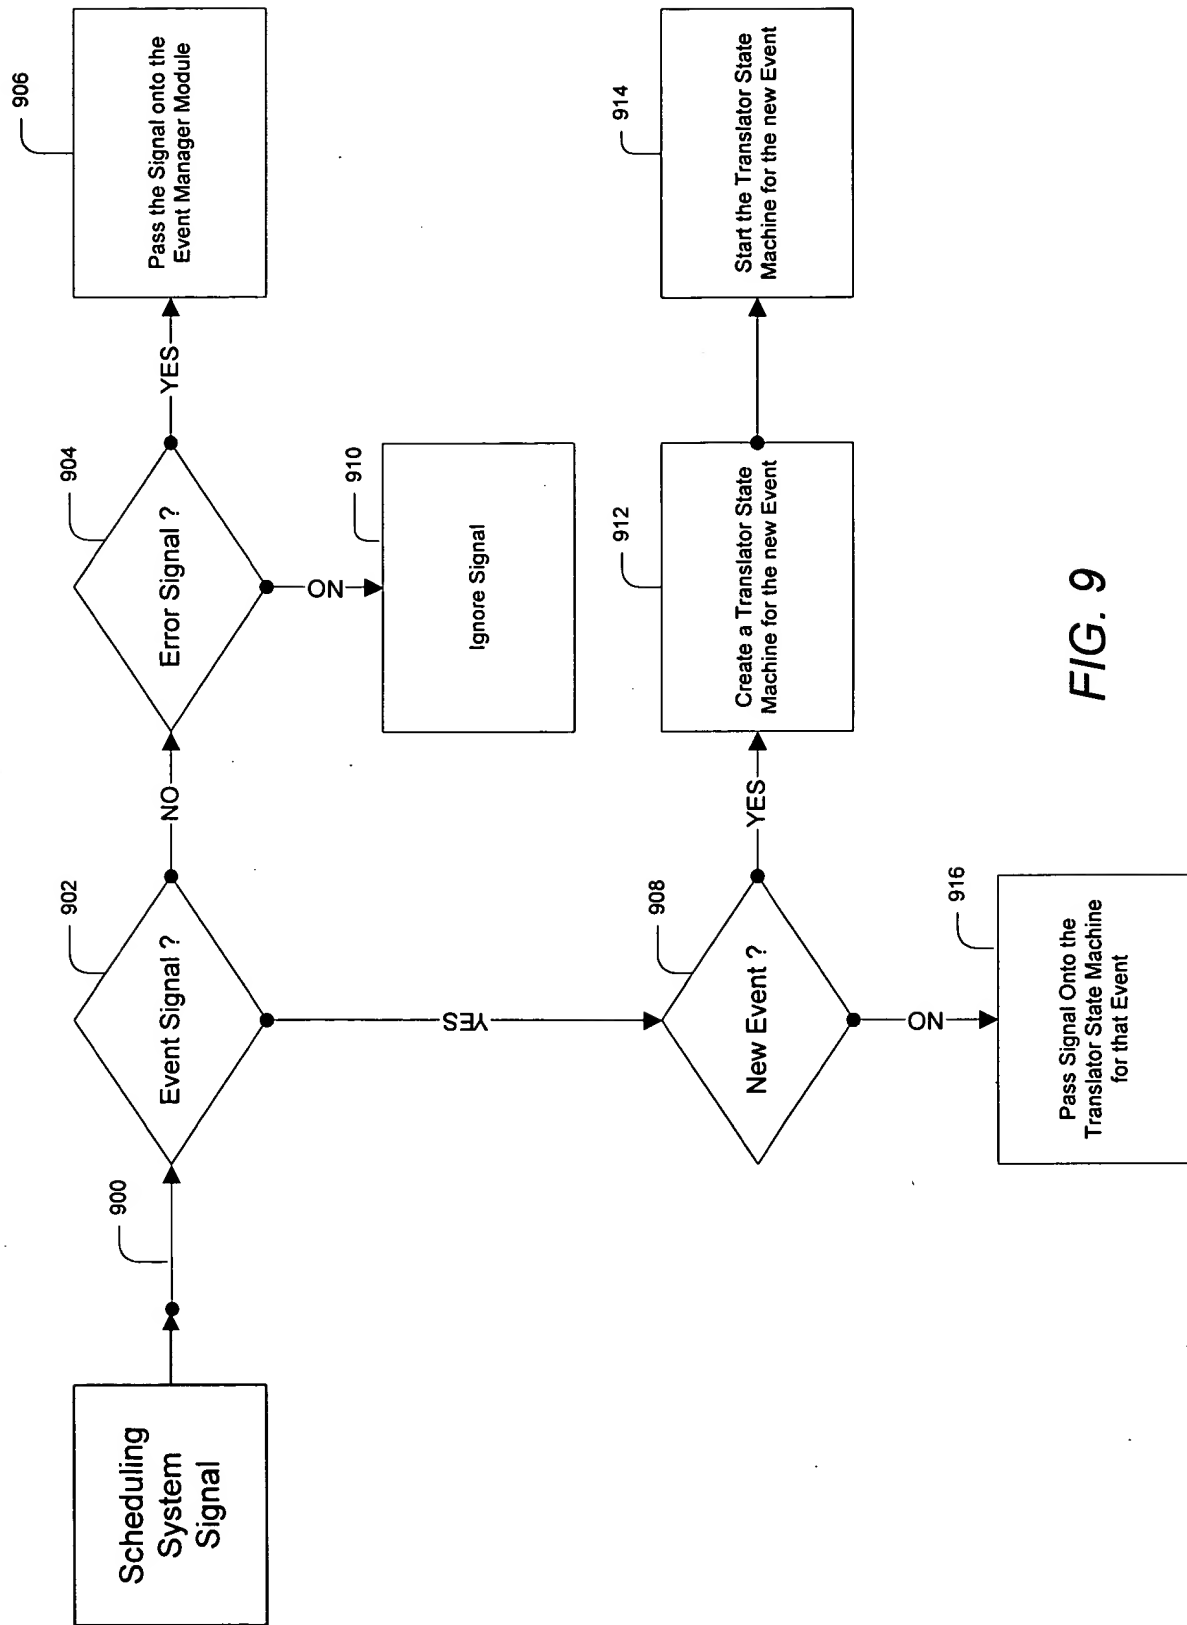


FIG. 9


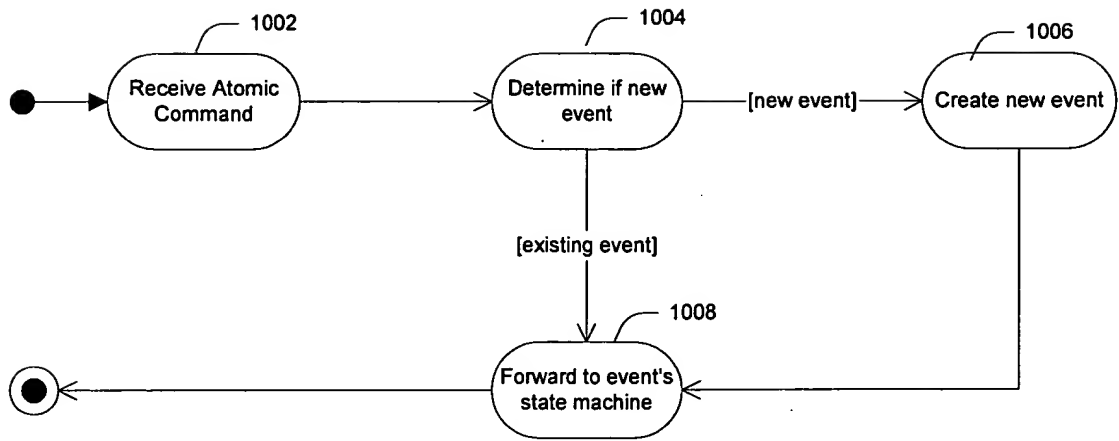


FIG. 10

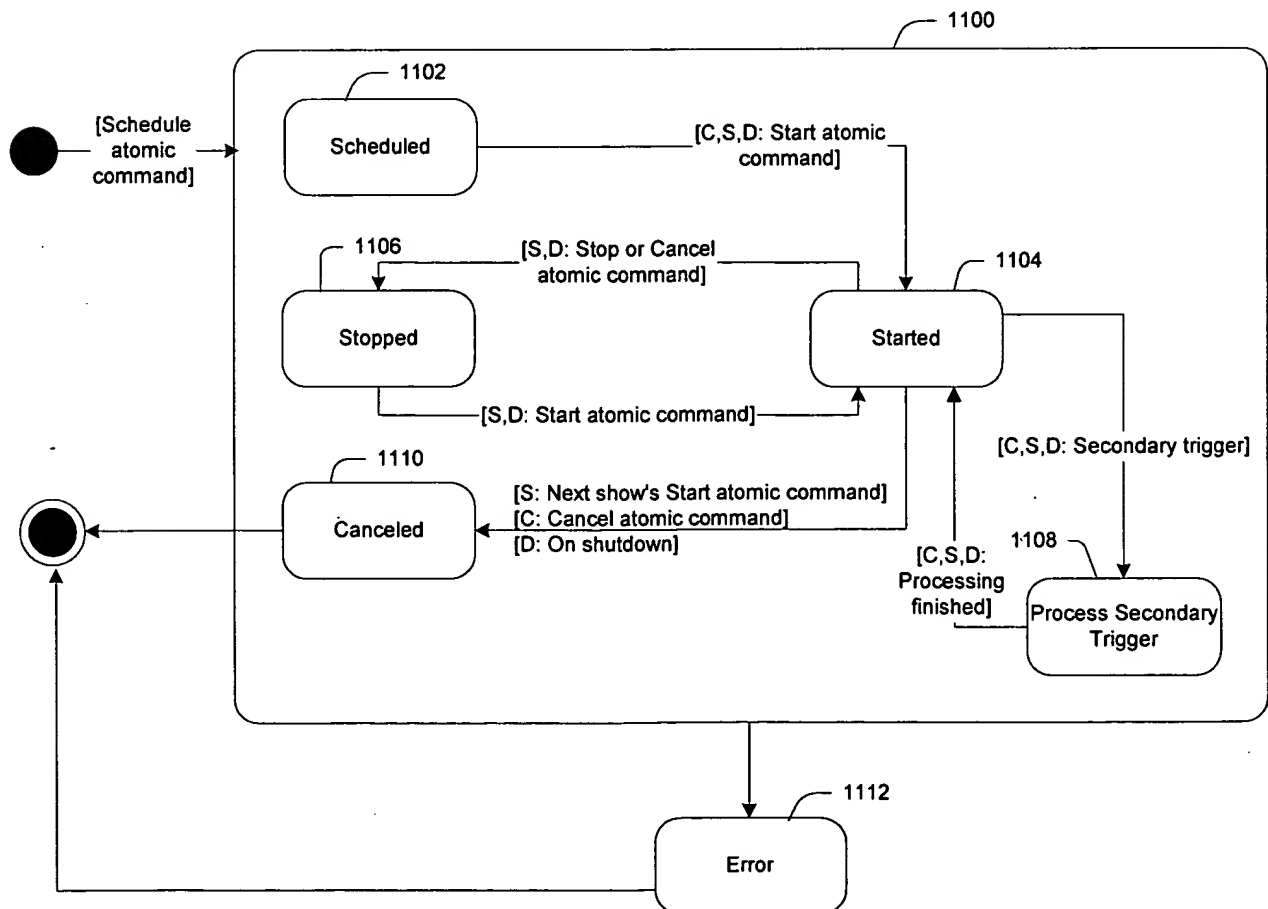

C: Commercial Event
S: Show Event
D: Default Event

FIG. 11

09324-0490-0000

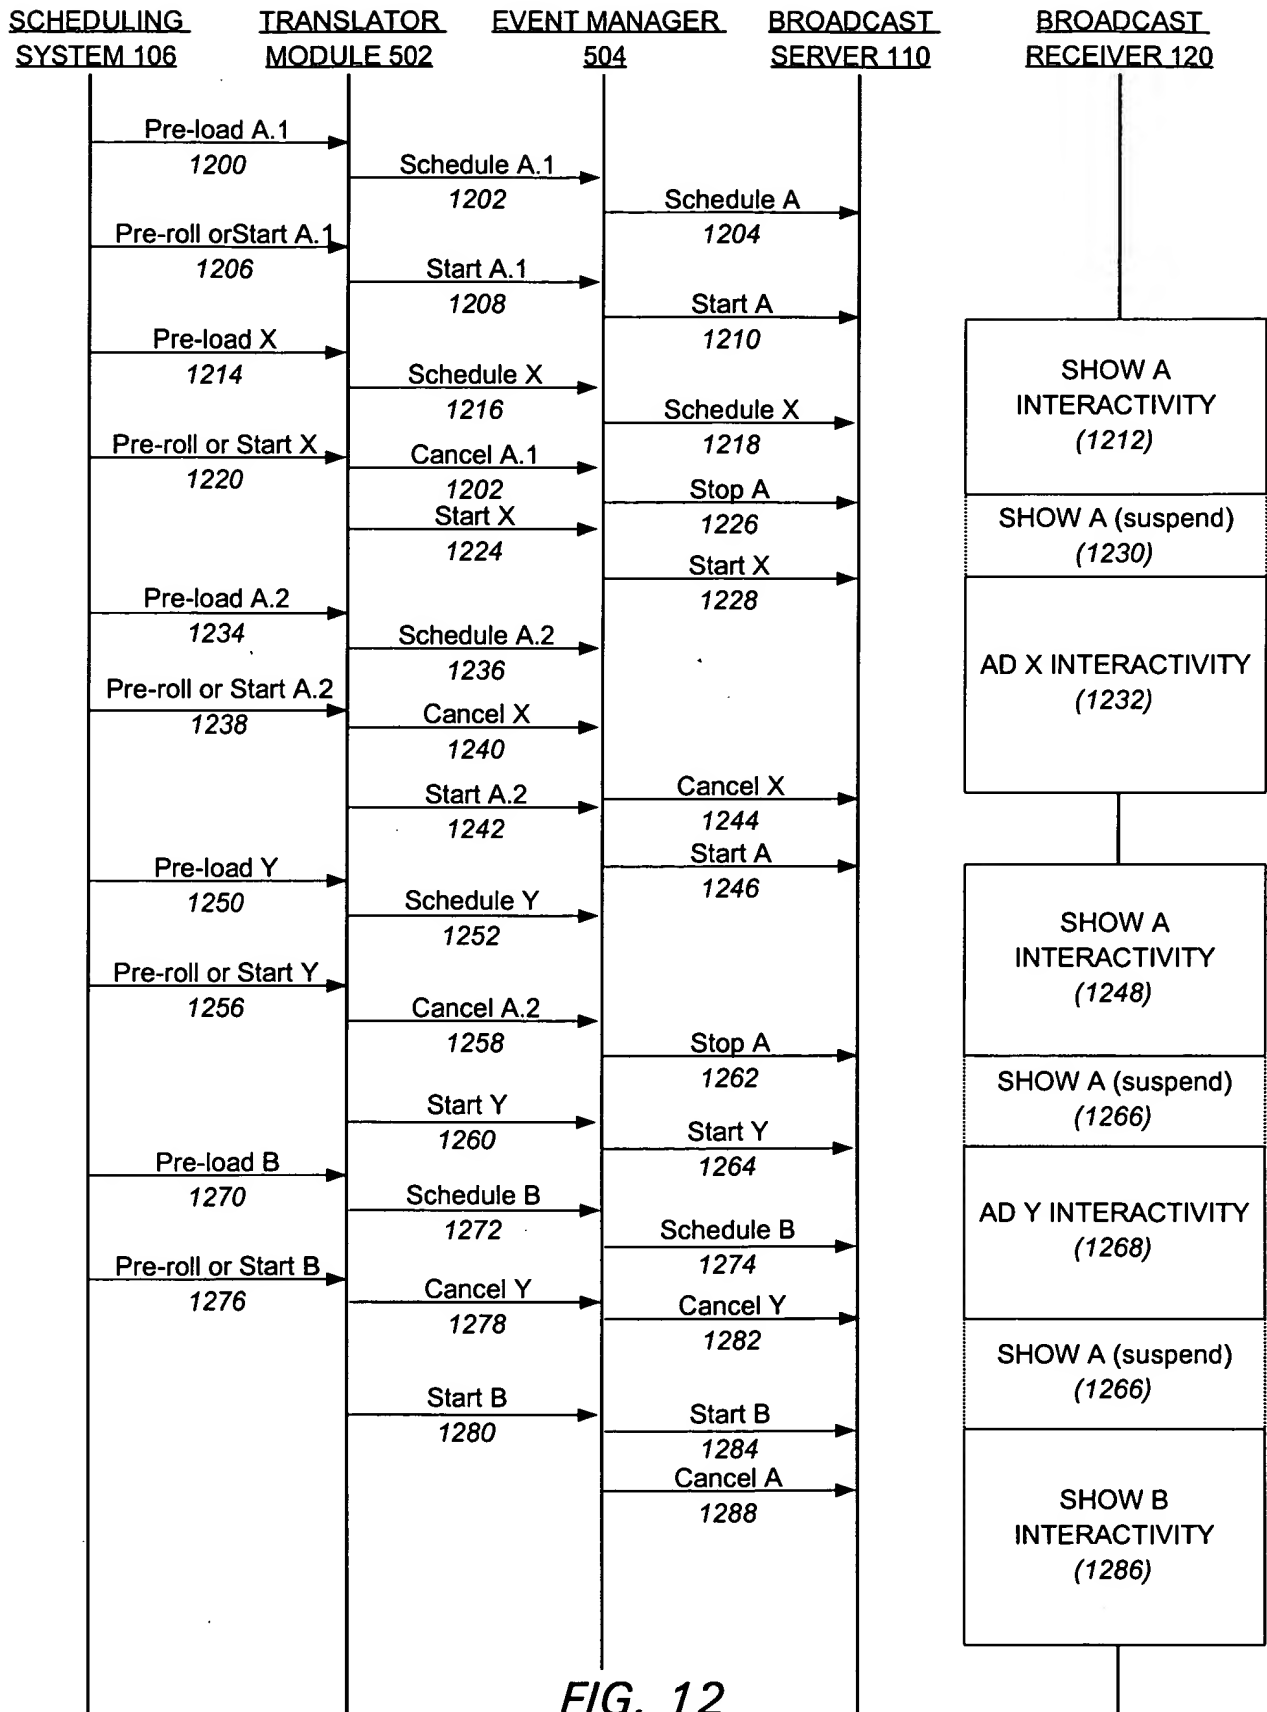


FIG. 12